

Electric Fogger Owner's Manual



**Model:
F-8, F-16**



 VIEW NOW

(220-240 V~50Hz)

Read and save these instructions.

www.xpowerstore.com | www.xpowerstore.gr
info@xpowerstore.com | info@steriexpert.com

EU-1-30 Έκδοση: 1.1.Alpha

Safety Instructions




WARNING: READ AND SAVE THESE INSTRUCTIONS BEFORE USING THIS PRODUCT.

When using electrical appliances, especially when children or animals are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury, including, but not limited to the following:


- DO NOT attempt to perform any service or maintenance not outlined in instruction manual.
- WARNING: To reduce the risk of electric shock – Use indoors only. DO NOT use outdoors.
- WARNING: This machine is not intended for use by children. Adult assembly and operation required. To reduce the risk of injury, close supervision is necessary when an appliance is used near children.
- DO NOT use as a toy.
- DO NOT leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
- DO NOT unplug unit by pulling on cord, to unplug, grasp the plug, not the cord.
- WARNING: Never use a machine with a damaged cord or plug, or after the machine malfunctions or is dropped, damaged. Return to an authorized service center for service, examination, repair, or electrical or mechanical adjustment.
- To disconnect, turn all controls to the off (“O”) position, then remove plug from outlet.
- DO NOT pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. DO NOT run appliance over cord. Keep cord away from heated surfaces.
- DO NOT handle plug or appliance with wet hands.
- Use extra care when cleaning on stairs.
- DANGER: DO NOT expose the machine to rain or water.
- DO NOT use or store machine where it can fall or be pulled into tub or sink or standing water. If machine falls into water, unplug it, DO NOT reach into the water. Keep units out of baths and DO NOT operate on a wet floor, or wet surface.
- WARNING: DO NOT allow any material to clog or block air intakes as this may cause units to overheat and result in a fire or electrical hazard. DO NOT direct the air / fogging outlet to human beings or living animals.
- WARNING: DO NOT expose this machine to extreme temperature.
- WARNING: Filling these types of solution / liquid into the solution tank, may cause safety hazards, corrosive damages to the machine or blockage of the fogging system.
 - (1) Strong acids, strong bases or other corrosive liquids
 - (2) Alcohol, or flammable or explosive liquids
 - (3) Oil, or other organic oils
 - (4) Suspensions, such as water with sands
 - (5) Detergents

Electric Fogger Introduction

The Electric Fogger produces ULV fine mist with high velocity airflow helping the distribution of different liquids to the indoor space and surfaces for various applications.

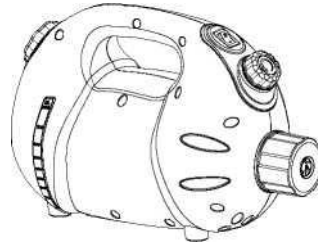

Items included

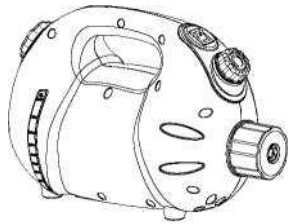

Electric Fogger x 1




• Owner's Manual x 1



• Fogging Outlet x 1


The fogging outlet might be sold separately. Some of the models may already include extra fogging outlets.

Parts Description

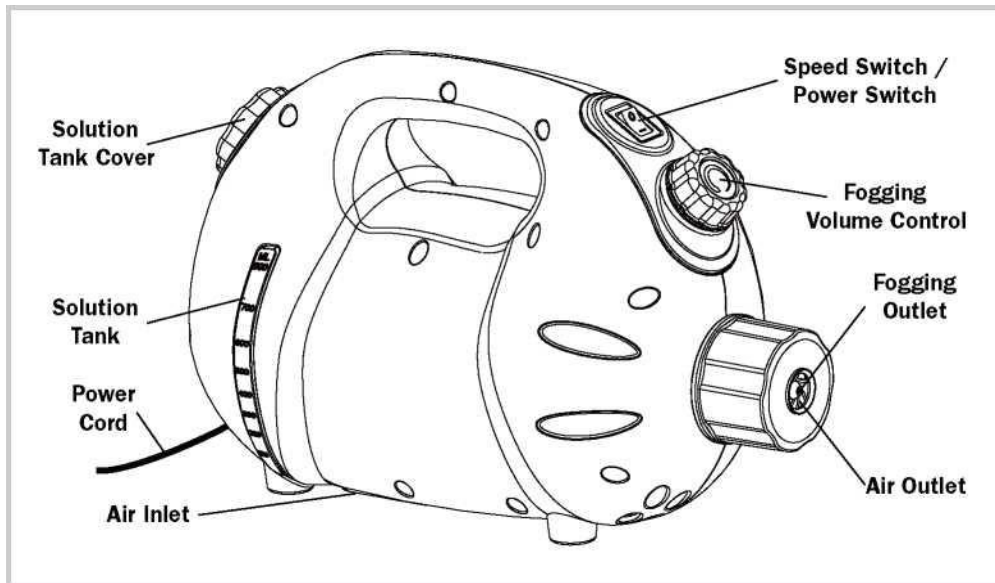

Operation Guide

Change the Fogging Outlet*

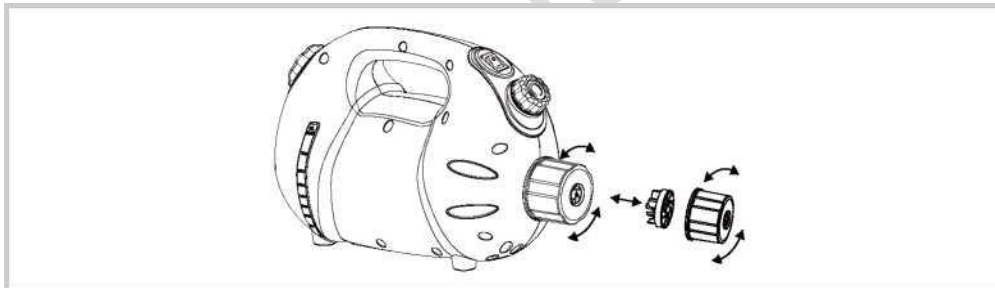


- Turn counterclockwise to uninstall the fogging outlet cover and take out the fogging outlet. Apply the new fogging outlet and reinstall the fogging outlet cover.
- The size of the fogging outlet varies and produces different fogging effects. (See Page 8: Technical Specifications).

*The fogging outlet might be sold separately. Some of the models may already include extra fogging outlets.




Control Panel

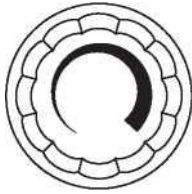


Fogging Volume Control

- Turn counterclockwise to highen the fogging volume. Turn clockwise to lowen the fogging volume.
- When at the lowest position, no liquid will coming out.

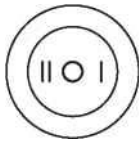

Speed Switch (For model F-16 only)

- Switch to “0” setting to turn the machine OFF.
- Switch to other settings to turn the machine on. “I”/“II” means the lower/higher speed setting

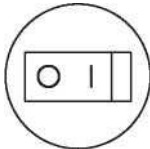

Power Switch (For model F-8 only)

- Switch to “0” setting to turn the machine OFF. Switch to “I” setting to turn the machine ON.


Start Your Job

Fill the Solutiong Tank

- **IMPORTANT:** Always turn the fogging volume control to the lowest setting and disconnect the machine from the power source before filling the solution tank.
- Turn counterclockwise to open the solution tank cover, and fill designated solution or liquid into the solution tank. Do not exceed the maximum capacity of the solution tank. (See *Page 7: Fogging System Maintenance*) Close the solution tank cover.
- **WARNING:** Filling these types of solution / liquid into the solution tank may cause safety hazzards, corrosive damages to the machine or blockage of the fogging system:
 - (1) Strong acids, strong bases or other corrosive liquids
 - (2) Alcohol, or flammable or explosive liquids
 - (3) Oil, or other organic oils
 - (4) Suspensions, such as water with sands
 - (5) Detergents

IMPORTANT: If you intend to fill the solution of the types mentioned above, please contact the manufacturer of the solution for usage reference and proper methods of cleaning. (See *Page 7: Fogging System Maintenance*)

Start Your Job (Continued)

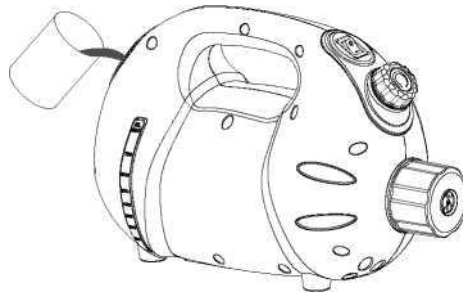


Select a Power Source with a Proper Location

- Check the throw distance of the machine. (See Page 8: *Technical Specifications*)
- Please find a power source with a proper location where the fogging droplets can reach designated objects.

Start Fogging

- Connect the machine to power source.
- **IMPORTANT:** Make sure the fogging volume control is on the lowest setting before turning the power on.
- Turn on the machine and set to designated speed.
- Turn the fogging volume control counterclockwise to set designated fogging volume.

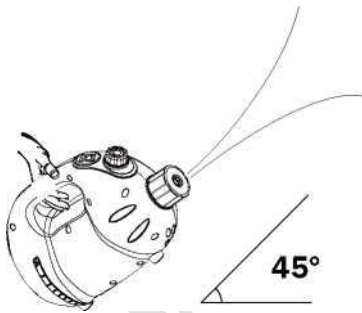

Tips:

- You could adjust the operation angle for different applications.
- When working at an angle 45° with the ground level, the machine can deliver the fogging droplets to the farthest distance.
- When working at an angle over 45° , the fogging volume will decrease due to the gravity. It's suggest to work at an angle no more than 45° .

Turn off the Machine

- Turn the fogging volume control clockwise to the lowest setting.
- Turn off the machine and disconnect the machine from its power source.
- **IMPORTANT:** Discard or use up the liquids in the solution tank. If you are not able to use up the liquids, transfer the liquids into a safe container, or follow the disposal instructions of the liquids if applicable.

Use proper methods of cleaning for the solution tank. (See Page 7: *Fogging System Maintenance*)

User Maintenance and Servicing Instructions

Frequent maintenance is recommended on this appliance. Failure to follow the maintenance instructions may cause failure of the appliance and void the warranty. Always disconnect the machine from the power source before any maintenance or servicing.

Cleaning the Surface

- Use a damp cloth to wipe the surface of the housing. Do not clean the unit with water directly.
- Remove dirt or any other objects that could block the air inlet, air outlet or the fogging outlet.

Storage

- When not in use, make sure no liquids are left in the solution tank.
- Store the appliance in a dry and cool indoor place. Make sure it's out of reach of children.

Cleaning the Solution Tank

- Turn the fogging volume control to the lowest setting.
- Fill the solution tank with cold water to half of maximum capacity, close the solution tank and shake the machine a few times. Then open the solution tank and discard the water inside. Repeat the steps above 2 times.
- Check if the solution tank is clean. If not, you might repeat the steps above

Cleaning the Liquid Conduit and Fogging Outlet

- Turn the fogging volume control to the lowest setting.
- Fill the solution tank with cold water to half of maximum capacity and close the solution tank.
- Connect to power source.
- Turn on the machine and turn the fogging volume control to the highest setting.
- Keep the machine working for 3 minutes. Turn the fogging volume control to the lowest setting, turn off the machine and disconnect the power source.
- Open the solution tank and discard the water inside. Close the solution tank. Wipe the water on the machine surface and the fogging outlet.

Selection Suggestions of Cleaning Agent

- It's recommended to use COLD WATER ONLY to clean the fogging system.
- You might follow the cleaning and disposal instructions of the liquids used for fogging if applicable.
- WARNING: Filling these types of solution / liquid into the solution tank for cleaning, may cause safety hazards, corrosive damages to the machine or blockage of the fogging system.

(1) Strong acids, strong bases or other corrosive liquids

(2) Alcohol, or flammable or explosive liquids

(3) Oil, or other organic oils

(4) Suspensions, such as water with sands

(5) Detergents

Troubleshooting Guide

PROBLEM	POSSIBLE CAUSE	SOLUTION
Unit does not start	No electricity.	Check for power supply.
	The power cord is not properly plugged in.	Remove and reconnect the power cord.
Unit runs but the speed / noise is abnormal	Air inlet, air outlet or fogging outlet is blocked.	Remove blockage. (See Page 7: Fogging System Maintenance)
Unit runs but no liquid or fog is coming out	No liquid in the solution tank.	Fill up the solution tank with designated liquid.
	The solution tank is not enclosed.	Close the solution tank and fasten the solution tank cover.
	The fogging volume control is turned to the lowest setting.	Turn the fogging volume control to a higher setting.
	The fogging outlet is blocked.	Remove blockage. Clean the fogging outlet and the liquid conduit. (See Page 7: Fogging System Maintenance)
	The liquid conduit is blocked.	

Technical Specification

MODEL NUMBER	F-8	F-16
Voltage/Frequency	220-240 V~50 Hz	
Power	350 W	550 W
Solution Tank Capacity	800 ml	1600 ml
Airflow Speed Settings	1 Speed	2 Speeds
Cord Length	6.1 m	7.6 m
Housing	PP	
Unit Dimension (L) x (W) x (H)	30.7 16.2 x 19.7 cm	37.1 x 17.2 x 21.0 cm
Unit Weight	2.0 kg	2.5 kg
Safety Certification	CE	

If your product(s) is not listed above, please visit www.xpowerstore.com for more information.

Fogging Outlet Specification

	Fogging Outlet	Max Fogging Volume	Max Throw Distance
F-8	0.9 mm (Marked 1)	100 ml / min	8.0 m
	1.5 mm (Marked 2)	200 ml / min	8.5 m
F-16	2.0 mm (Marked 3)	250 ml / min	10.0 m

www.xpowerstore.com

Περιορισμένη Εγγύηση της XPOWER

ΠΕΡΙΟΡΙΣΜΕΝΗ ΕΓΓΥΗΣΗ ΔΥΟ (2) ΕΤΩΝ

Τα προϊόντα που φέρουν την επωνυμία XPOWER και αγοράστηκαν από την Attraction A.E, επίσημος αντιπρόσωπος και διανομέας όλων των προϊόντων της Xpower στην Ελλάδα από εξουσιοδοτημένους διανομείς, περιλαμβάνουν διετής περιορισμένη εγγύηση. Επικοινωνήστε μαζί μας μέσω email στο info@steriexpert.com και info@xpowerstore.com για να επιβεβαιώσετε τις πληροφορίες εγγύησης σχετικά με τα προϊόντα σας.

Η παρούσα περιορισμένη εγγύηση καλύπτει ελαττώματα στα υλικά και την εργασία για τα προϊόντα που φέρουν την επωνυμία XPOWER. Επικοινωνήστε με το διανομέα της XPOWER στην περιοχή σας για επισκευή και αντικατάσταση εξαρτημάτων εντός εγγύησης.

Τα στοιχεία που αναφέρονται παραπάνω, μεταξύ άλλων, δεν καλύπτονται από την εγγύηση:

- (1) Καλώδιο τροφοδοσίας, μπαταρίες, φίλτρα ή οποιοδήποτε άλλο εξάρτημα που θεωρείται “αναλώσιμο εξάρτημα” από την XPOWER.
- (2) Φυσιολογική φθορά.
- (3) Προβλήματα που προκύπτουν, άμεσα ή έμμεσα, κατά την αποκλειστική κρίση της XPOWER, από:
 - (3.1) Εξωτερικές αιτίες, όπως ατύχημα, κατάχρηση, κακή χρήση ή προβλήματα με την παροχή ηλεκτρικού ρεύματος.
 - (3.2) Αποσυναρμολόγηση, συντήρηση ή τροποποίηση που δεν έχει εγκριθεί από την XPOWER.
 - (3.3) Χρήση που δεν συμφωνεί με τις οδηγίες του προϊόντος που αναφέρονται στο Εγχειρίδιο Χρήσης.
 - (3.4) Αποτυχία τήρησης των οδηγιών του προϊόντος ή μη εκτέλεση της απαραίτητης συντήρησης που αναφέρεται στο Εγχειρίδιο Χρήσης.

XPOWER

XPOWER Manufacture, INC

668 S. 6th Ave.,

City of Industry, CA 91746 USA

www.xpowerstore.com | www.xpowerstore.gr
info@xpowerstore.com | info@steriexpert.com

Διαβάστε και αποθηκεύστε αυτές τις οδηγίες.

Ευρετήριο: EU-1-30
Έκδοση: 1.1.Alpha

Μέγεθος χαρτιού: A4/297 mm x β210 mm Διάταξη: A5/148 mm x 210 mm